



VERTEX

WEBSTER HARDNESS TESTER




A certain shape of hard steel indenter determines the hardness of the material at the indentation depth of the standard spring. The indentation depth of 0.01mm is defined as a webster hardness unit, expressed in HW.


APPLICATION:

- Heat treatment: can distinguish the materials before and after heat treatment, which is convenient for checking the most suitable heat treatment conditions.
- Hardness status: It can be distinguished whether the material is hard or soft to avoid product failure caused by mixed use.
- Material testing: mainly used to test the hardness of aluminum, copper and steel materials, which can be converted into other hardness values such as: HV, HB, HRB, HRE, HRF, HRH, HBa.

Instrument Structure

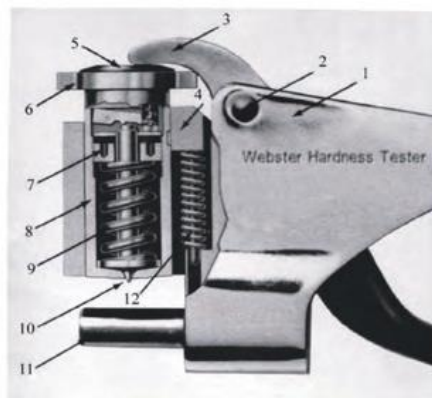

Indenter Shapes

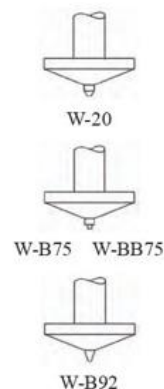

- 1—Frame
- 2—Pivot screw
- 3—Handle
- 4—Reset key
- 5—Adjusting screw
- 6—Dial head
- 7—Adjusting nut
- 8—Indenter cylinder
- 9—Load spring
- 10—Indenter
- 11—Anvil
- 12—Return spring

Technical Parameters:

Item	Type	Applicable Materials	Hardness Range	Specimen Size/mm
1	W-20	Aluminum alloy	25-110 HRE 58-131 HV	Thickness 0.4-6 Inner diameter ≥ 10
2	W-20a			Thickness 0.4-13 Inner diameter ≥ 10
3	W-20b			Thickness 0.4-8 Inner diameter ≥ 6
4	W-B75	Hardened brass Hardened Aluminum alloy	20-100 HRB 63-105 HRF	Thickness 0.4-6 Inner diameter ≥ 10
5	W-BB75	Soft brass Pure copper	18-100 HRE	Thickness 0.4-6 Inner diameter ≥ 10
6	W-B92	Cold-rolled steel sheet stainless steel	50-92 HRB	Thickness 0.4-6 Inner diameter ≥ 10

Tester Specification:

Testing Range	0~20HW
Accuracy	0.5HW
Weight	0.5kg
Size	L190*W80*T25mm

Operating Method:

Put the specimen between the anvil and the indenter and press down the handle until the bottom is felt. At the time the dial indicator will point at a reading which is the hardness value obtained.



Standard Package:

Tester, standard hardness block, spare indenter, wrench, small screwdriver, instruction manual, carrying case.

Optional Accessories:

Spare indenter, standard hardness block, spare dial glass



Webster & Barcol hardness conversion table

Barcol HBa	Brinell 10mm 500kg HB	Vicktrs 5kg HV	Webster HW	Rockwell HR			
				B	E	F	H
35		21					32
36		22					35
37		23					37
38		24					40
39		25					42
40	25	26					45
41	25	27					47
42	26	28					49
43	27	29					51
44	27	30					54
45	28	30					56
46	29	31					58
47	30	32			23		60
48	30	33	0.7		26		62
49	31	34	1.3		28		64
50	32	35	1.9		31		66
51	33	36	2.5		34		68
52	34	38	3.1		36		70
53	35	39	3.6		39	30	72
54	37	40	4.2		41	34	73
55	38	41	4.7		44	37	75
56	39	43	5.3		46	40	77
57	40	44	5.8		48	43	78
58	42	45	6.3		50	46	80
59	43	47	6.8		53	48	82
60	45	49	7.3		55	51	83
61	46	50	7.8		57	54	85
62	48	52	8.3		59	56	86
63	50	54	8.8		61	59	88
64	51	56	9.2		63	61	89
65	53	58	9.7		65	63	90
66	55	60	10.1		67	66	92
67	57	62	10.6		69	68	93
68	60	65	11.0			71	94
69	62	67	11.4			73	95
70	64	70	11.8	17		75	97
71	67	72	12.2	23		76	98
72	69	75	12.6	28		78	99
73	72	78	12.9	33		80	100
74	75	81	13.3	38		81	101
75	78	85	13.7	42		83	102
76	80	88	14.0	47		84	103
77	84	92	14.3	51		86	104
78	87	95	14.7	55		87	105
79	90	99	15.0	59		89	106
80	94	103	15.3	63		90	106
81	97	108	15.6	66		91	107
82	101	112	15.9	70		92	108
83	105	117	16.2	73		94	109
84	109	121	16.4	76		95	109
85	113	126	16.7	79		96	110
86	117	131	16.9	81		97	111
87	121	137	17.2	84		98	111
88	126	142	17.4	86		99	112
89	130		17.6	88		100	112
90	135		17.8	90		101	113
91	140		18.0			102	114
92	145		18.2			103	100
93			18.4			103	100
94			18.6			104	101
95			18.7			105	102
96			18.9			106	102
97			19.0			106	103
98			19.2			107	
99			19.3			107	
100			19.4			108	

Test standard : ASTM-B647 & B-648 Standard Test Method For Webster & Barcol Hardness Tester



<https://www.vertexmachines.com/>



+91-9323405785



info@vertexmachines.com

Actual product may differ in color and appearance due to constant development.