




# VERTEX


## WEBSTER HARDNESS TESTER -USA



The Webster® Model B Tester is designed to cover the hardness of aluminum alloys from the 1100 to the 7075 series. The 20 graduations on the Webster® dial indicator covers the range between 25 and 110 on the Rockwell E Scale. The graphs on this page show the range covered by the Webster® Model B Tester. The lines for these graphs were derived from many tests on a variety of alloys and show an average curve. Production lots of alloys can vary in work-hardening characteristics which may result in instances where readings do not fall precisely on the curve.

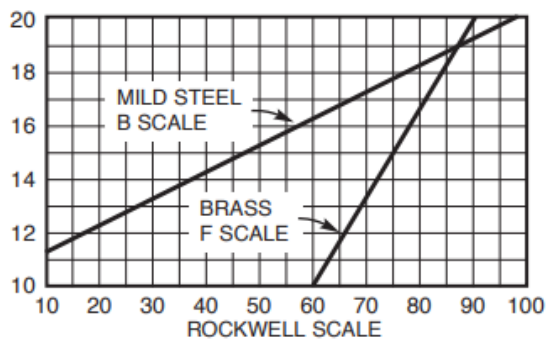

**HARDNESS CONVERSION FOR ALUMINUM ALLOYS MODEL B**

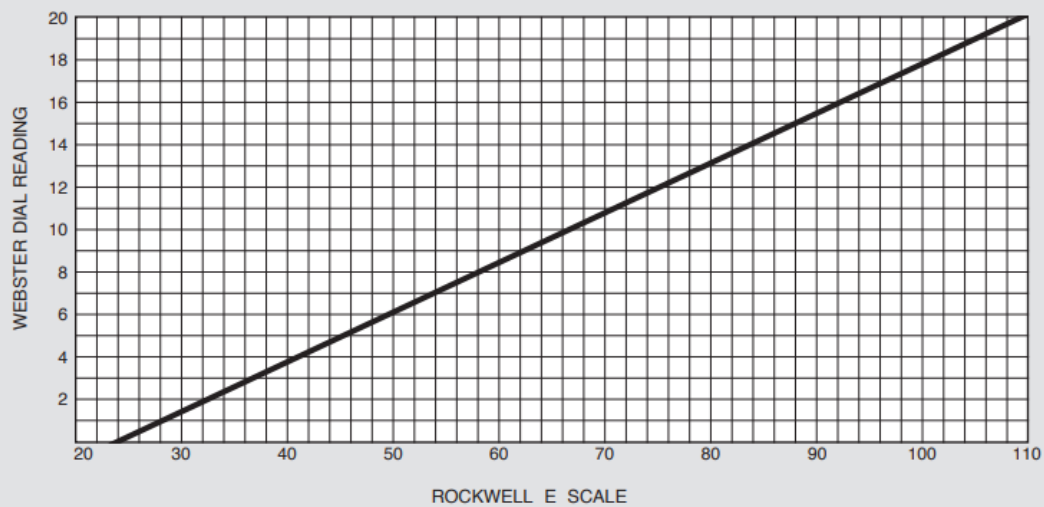

## Specification:

Parameter	HW
Display Type	Analog
Model Name/Number	B
Accuracy	1
Brand	WEBSTER



<https://www.vertexmachines.com/>



+91-9323405785



info@vertexmachines.com

Actual product may differ in color and appearance due to constant development.